



Normal usage

Switch on	Short press of button
Ground Grab	Short press of button while TRX on ground
Remove Ground Grab	Short press of button while TRX in air
Reset reminder signal	Short press of button
Switch off	Press button for one second

Menu Concept and Usage

The menus are entered via switching TRX off and holding the button depressed. After a while, a short melody will be played to indicate TRX is in Config Mode.

The sequence of pressing the button after the Config Mode melody selects the menu or special function.

Menus with a choice to make are always entered with a depressed button. TRX will then cycle through all available options. Release the button to select the desired option. TRX will permanently store this setting and return to normal operation.

Button Sequences after Config Mode Melody

Access to Signalling menu	Continue to hold button
Access to Sensitivity menu	Release, then press and hold
Access to Buzzer Pitch menu	Release, press 1x, then press and hold
Make Sensitivity menu first	Release, press 3x
Factory Reset:	Release, press 6x

Good to know:

- 1) Everything, including the speaker opening, is waterproof to 3 m.
- 2) Vibration and buzzer will always perform self-test on power up and power down, even if vibration or buzzer are switched off in the menu.
- 3) There is no way to switch off the LED.
- 4) After 5 minutes of usage with no button pressed a cyclic reminder signal will sound.
- 5) The TRX has 3 menus (i) Signalling (ii) Sensitivity (iii) Buzzer Pitch and several special functions.