



**Normal usage**

Switch on	Quick press of button
Ground Balance	Quick press of button while TRX on ground
Remove Ground Balance	Quick press of button while TRX in air
Reset Lost Alarm / Auto-Off	Quick press of button
Switch off	Press and hold button for half second

**Entering Setup-Mode**

Switch off a running TRX and continue holding down the button.  
 Listen for the two-tone jingles for power-down (beep-boo) and later for setup-mode (boo-beep).

**Button Sequences after Setup-Mode Jingle (Default Menu)**

Beep/Vibration Settings (3)	Continue to hold button, release on selection
Sensitivity Settings (4)	Release, press 1x (beep-boo-beep) and hold, release on selection
Set Expert Menu Style	Release, press 3x (boo-boo-beeeep)
Factory Reset	Release, press 6x (beep-beep-beep-boo-boo-boo)

**Button Sequences after Setup-Mode Jingle (Expert Menu)**

Sensitivity Settings (4)	Continue to hold button, release on selection
Beep/Vibration Settings (3)	Release, press 1x (beep-beep) and hold, release on selection
Beeper Pitch Settings (13)	Release, press 2x (boo-beep-tee) and hold, release on selection
Unknown Function	Release, press 3x (boo-beep-beep-boo)
Factory Reset	Release, press 6x (beep-beep-beep-boo-boo-boo)

**Good to know:**

- 1) Everything, including the speaker opening, is waterproof to 3 m.
- 2) Vibration and beeper will always perform self-test on power up and power down, even if vibration or beeper are switched off in the setup.
- 3) There is no way to switch off the LED (use duct tape if necessary).
- 4) After 5 minutes of usage with no button pressed a Lost Alarm will sound every 5 sec.
- 5) After 10 minutes of usage with no button pressed the TRX will switch off automatically.
- 6) The TRX has 2 menu styles and might have more hidden functions.